


TERMINALS OF ECU

1. AIRBAG SENSOR ASSY CENTER

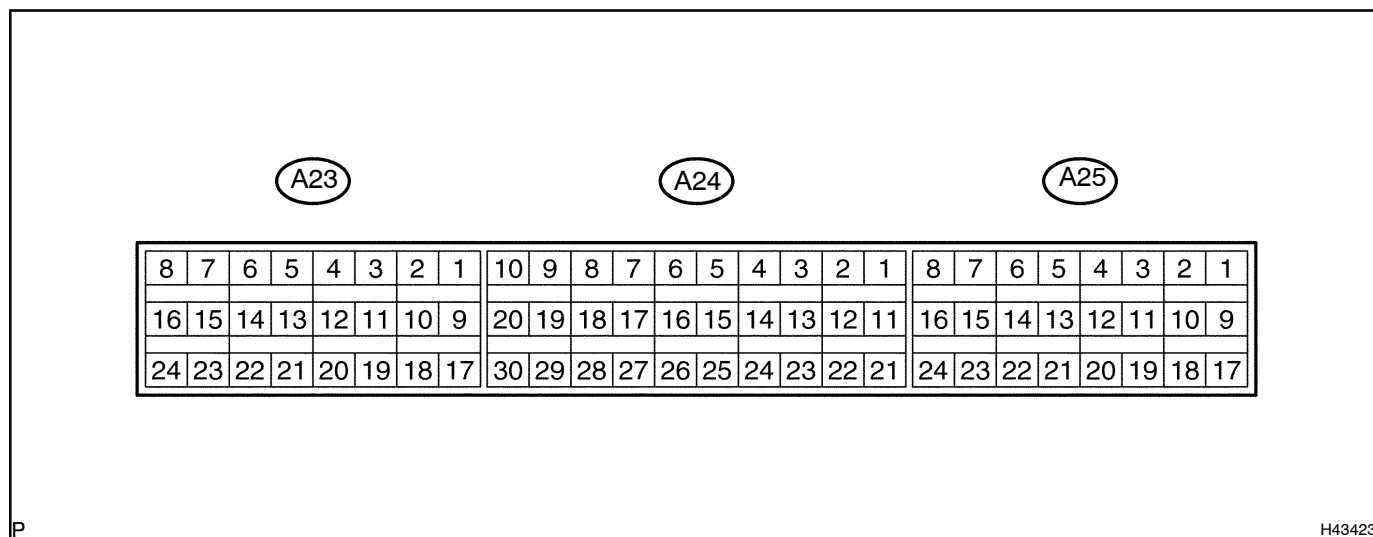

Terminal No.	Terminal Symbol	Destination
A23-1	SFL+	Front seat airbag assy LH (Side squib LH)
A23-2	SFL-	Front seat airbag assy LH (Side squib LH)
A23-3	ICL-	Curtain shield airbag assy LH (Curtain shield squib LH)
A23-4	ICL+	Curtain shield airbag assy LH (Curtain shield squib LH)
A23-5	PL+	Front seat outer belt assy LH (Front P/T squib LH)
A23-6	PL-	Front seat outer belt assy LH (Front P/T squib LH)
A23-7	PLR-	Rear seat 3 point type outer belt assy (Rear P/T squib LH)
A23-8	PLR+	Rear seat 3 point type outer belt assy (Rear P/T squib LH)
A23-9	LSP+	Seat position airbag sensor
A23-10	LBE+	Front seat inner belt assy LH
A23-13	SSL+	Side airbag sensor assy LH
A23-17	LSP-	Seat position airbag sensor
A23-19	VUPL	Side airbag sensor assy LH
A23-20	VUCL	Airbag sensor rear LH
A23-21	ESL	Side airbag sensor assy LH
A23-22	ESCL	Airbag sensor rear LH
A23-23	SSL-	Side airbag sensor assy LH
A24-1	P2+	Front passenger airbag assy (P squib, Dual stage – 2nd step)
A24-2	P2-	Front passenger airbag assy (P squib, Dual stage – 2nd step)
A24-3	P-	Front passenger airbag assy (P squib)
A24-4	P+	Front passenger airbag assy (P squib)
A24-5	D+	Horn button assy (D squib)
A24-6	D-	Horn button assy (D squib)
A24-7	D2-	Horn button assy (D squib, Dual stage – 2nd step)
A24-8	D2+	Horn button assy (D squib, Dual stage – 2nd step)
A24-9	DK+	Instrument panel airbag assy lower No.1 (Knee airbag (D side) squib)
A24-10	DK-	Instrument panel airbag assy lower No.1 (Knee airbag (D side) squib)
A24-13	MPX1	Combination meter assy (SRS warning light)
A24-16	SIL	DLC3
A24-18	GSW	Theft deterrent ECU (Door lock control receiver)

DIAGNOSTICS - SUPPLEMENTAL RESTRAINT SYSTEM

Terminal No.	Terminal Symbol	Destination
A24-19	PK+	Instrument panel airbag assy lower No.2 (Knee airbag (D side) squib)
A24-20	PK-	Instrument panel airbag assy lower No.2 (Knee airbag (D side) squib)
A24-21	IG2	Ignition switch
A24-22	MPX2	Passenger side J/B ECU
A24-24	GSW3	Telephone transceiver and speaker relay (Mayday ECU)
A24-25	E1	Ground
A24-26	E2	Ground
A24-27	-SR	Airbag sensor front RH
A24-28	-SL	Airbag sensor front LH
A24-29	+SR	Airbag sensor front RH
A24-30	+SL	Airbag sensor front LH
A25-1	PRR+	Rear seat 3 point type outer belt assy (Rear P/T squib RH)
A25-2	PRR-	Rear seat 3 point type outer belt assy (Rear P/T squib RH)
A25-3	PR-	Front seat outer belt assy RH (Front P/T squib RH)
A25-4	PR+	Front seat outer belt assy RH (Front P/T squib RH)
A25-5	ICR+	Curtain shield airbag assy RH (Curtain shield squib RH)
A25-6	ICR-	Curtain shield airbag assy RH (Curtain shield squib RH)
A25-7	SFR-	Front seat airbag assy RH (Side Squib RH)
A25-8	SFR+	Front seat airbag assy RH (Side Squib RH)
A25-12	SSR+	Side airbag sensor assy RH
A25-15	RBE+	Front seat inner belt assy RH
A25-16	FSR+	Occupant detection sensor
A25-18	SSR-	Side airbag sensor assy RH
A25-19	ESCR	Airbag sensor rear RH
A25-20	ESR	Side airbag sensor assy RH
A25-21	VUCR	Airbag sensor rear RH
A25-22	VUPR	Side airbag sensor assy RH
A25-24	FSR-	Occupant detection sensor